

## Electromagnetic Door Holders and Releases



S4A-36B Signal feedback

### What is electromagnetic door stopper?

Electromagnetic door holders and releasers keep doors open until they are released by fire-alarm systems, remote smoke detectors, or other switching devices. They provide a high holding force. In the event of a power failure, they release the door to a closed position to keep the facility secure.

### How do you remove a magnetic door stopper?

Removing the Old Magnetic Door Stop


Use a screwdriver to loosen the screws until they come off. Remove the entire catch assembly and put them aside.

Next, work on the magnetic door stop installed on the wall trim. Remove the screws, pull off the device, and set it aside.

### Specifications

<b>Maximum suction power:</b>	60kg (120Lbs)	<b>Work indicator:</b>	red and green show the working status of the ground suction
<b>Working voltage:</b>	DC12V/DC24V (adjustable)	<b>Product features:</b>	beautiful and generous appearance
<b>Working current:</b>	DC12V/170mA, DC24V/85mA	<b>Applicable door type:</b>	fire door, smoke-proof door

### Wiring Diagram

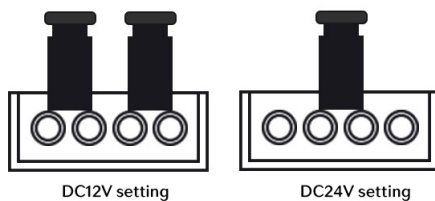

### Dimensions

