



L & Z AUXILIARY BRACKET INSTALLATION INSTRUCTIONS


Diagram of Electromagnetic Lock Auxiliary Bracket Installation Procedures For Inswing Door

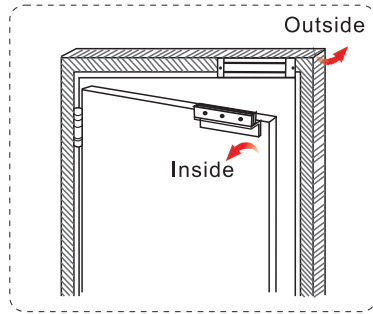


Opening mode →

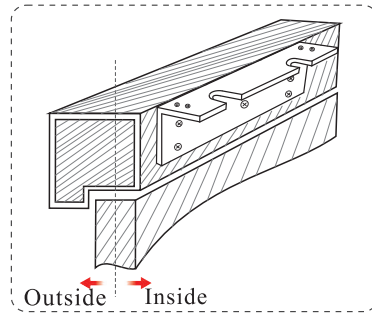


Step 1: Use cross screwdriver to fix the Auxiliary bracket to the doorframe.

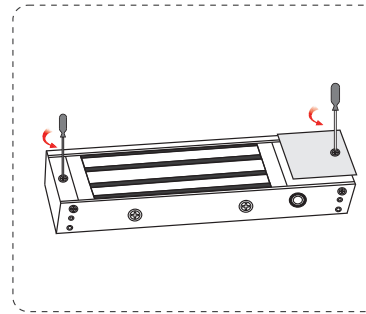


Step 2: Use cross screwdriver to dismount the anti-dismantle screw on the lock.

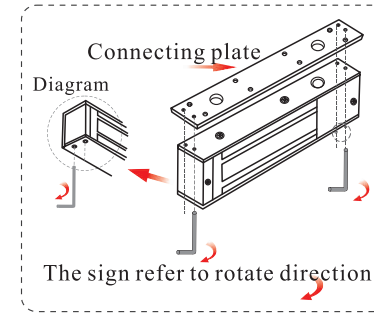


Step 3: Use Allen key to separate the connecting plate from the bottom of the lock. Be careful to hold the screw to prevent slipping.

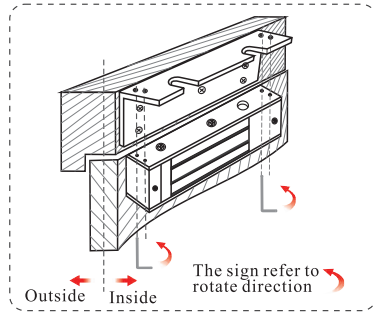


Step 4: Use Allen key to install the lock to L- bracket. Be careful to hold the screw to prevent slipping.

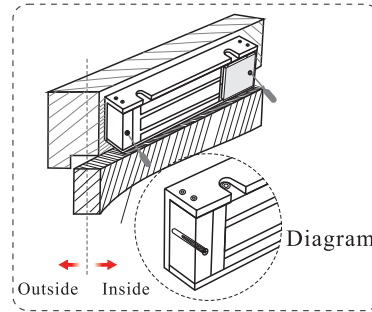


Step 5: Use cross screwdriver to fix the anti-dismantle screw onto the lock.

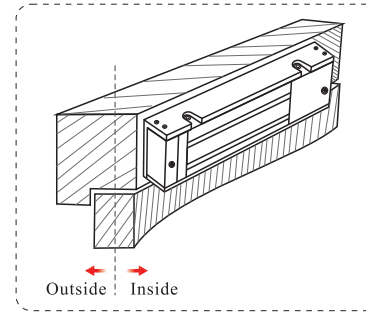


Step 6: Status of the lock after installation

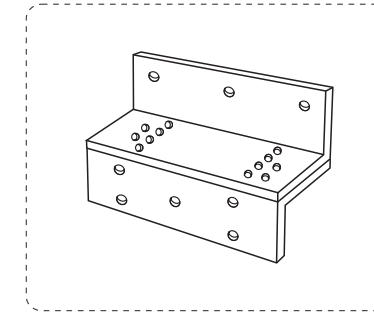


Step 7: Use cross screwdriver to assemble the Z- bracket.

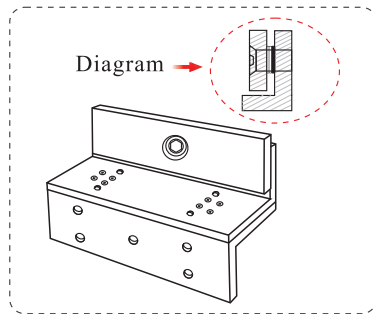


Step 8: Install the armature plate to the Z- bracket (See schematic diagram in Fig.8).

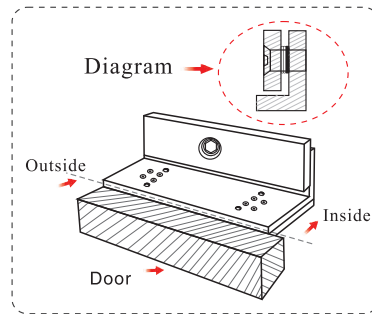

Step 9: Fix Z- bracket to relevant position on the door leaf. (Note: Keep tight contact between the armature plate and the lock)

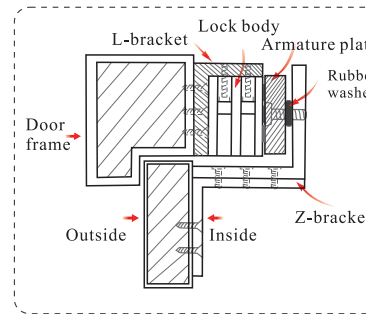

Step 10: Installation is finished.

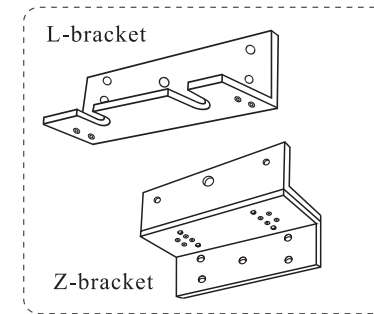

Note: The rubber washer must be installed to keep proper resilience (See Fig.10).